



# Planer Board Instructions

- 1.) Assemble release to the board (instructions inside).
- 2.) Let out desired length of line.
- 3.) Clip OR-16 to the line so it is behind the pin. (see Fig.1).



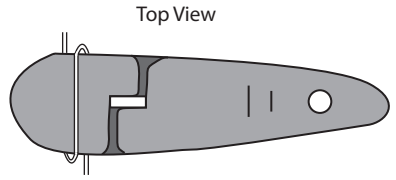


Fig. 1


- 4.) Towards the reel, attach the Push Pin Release to the line. (Make sure the Push Pin Release has been pushed in enough. DON'T push in too far. If put in the water and the Push Pin Release comes out, reel up and apply a little more pressure to the pin. This will hold the line in tighter (see Fig.2).

Fig. 2

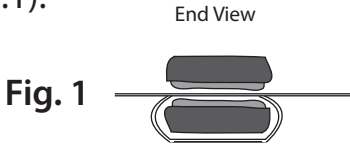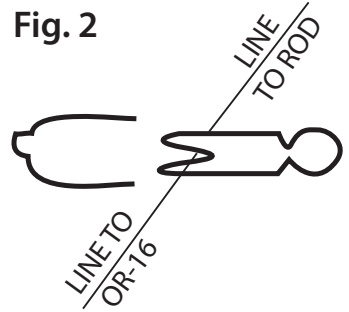

- 5.) Place the board in the water, letting out the line to a desired distance you want your board to run from the boat (see Fig.3).

Fig. 3

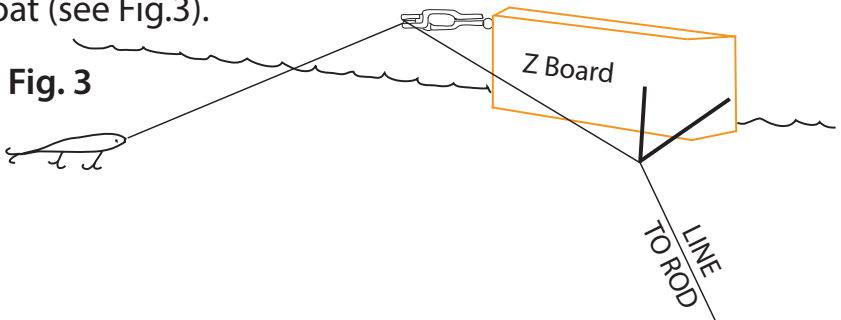

- 6.) Adjust the board to run faster or slower (instructions inside).
- 7.) Adjust your drag. We recommend the drag to be loose so when the fish hits the drag comes out.
- 8.) When the fish hits, the board will skip across the water. If you have your drag set the fish will pull out the drag. Take the fishing pole in your hand, reel in the slack if there is any. If the board didn't release, give the pole a quick, sharp jerk and the push pin will release.
- 9.) Reel into the board. Remove the board. The fish is still at least 100' behind the boat with no board on the line.
- 10.) CATCH YOUR FISH!!

*WARNING: THIS PRODUCT CONTAINS LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER OR BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.*

**Z Boards LLC. Company of L&R Tackle Co.**

